
## BulletCam HL user manual

Updated August 22, 2025

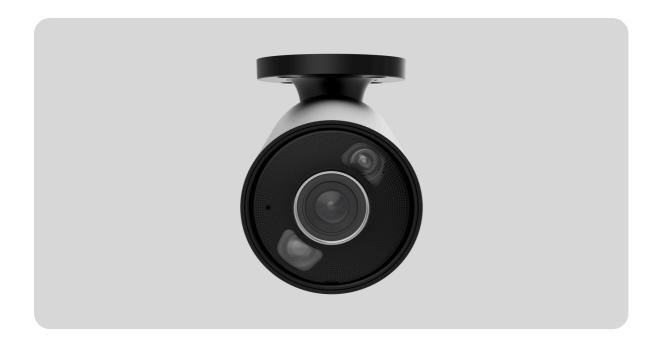

**BulletCam HL** is a wired Al-powered security IP camera with hybrid illumination that enhances image quality at night. In normal night mode, the camera uses IR illumination. When motion is detected, BulletCam HL instantly turns on white light to bring out the object colors. The camera features motion detection and object recognition and allows users to view archived videos and watch live streams. The camera is designed for outdoor and indoor use.

BulletCam HL is connected to the system via Ethernet. The recorded videos can be stored on an Ajax NVR added to the same network or a memory card installed in the camera.

The camera is available in several versions:

- BulletCam HL (5 Mp/2.8 mm);
- BulletCam HL (5 Mp/4 mm);

- BulletCam HL (8 Mp/2.8 mm);
- BulletCam HL (8 Mp/4 mm).

## **Buy BulletCam HL**



Camera versions with other enclosures are also available. All Ajax cameras are available here.

## **Functional elements**



- 1. Swivel mounting bracket.
- 2. Protective cover.
- 3. Screw for fixing camera position.
- 4. Slot for microSD card.
- **5.** Reset button.
- **6.** Microphone.

- 7. Camera lens.
- 8. Faceted lens. Covers the infrared LEDs and diffuses the rays.
- **9.** White LEDs. When motion is detected, the camera instantly turns on white light to bring out the object colors.
- 10. Cable channel for routing the cable connector from the camera.
- 11. Cable with a connector.
- **12.** QR code with the device ID. Used to add BulletCam HL to an Ajax system.
- **13.** Holes for attaching the camera to the surface.

## **Operating principle**

BulletCam HL is an IP camera that uses artificial intelligence (AI) for object recognition. Its algorithms can identify moving objects, distinguishing between humans, animals, or vehicles.

The device features hybrid illumination, combining infrared and white light to ensure high-quality images in any lighting conditions. BulletCam HL automatically switches between IR and white light depending on the scene, delivering clear black-and-white images in low light and providing color photos when motion is detected or additional illumination is required. The camera also adjusts the light intensity in real time to prevent overexposure, ensuring clear visibility of both near and distant objects.

To save the recorded videos, you need to add BulletCam HL to an Ajax NVR or install a microSD card with a memory capacity from 32 GB to 256 GB (not included in the complete set of the camera). The memory card should be V30 or faster. Additionally, the device can operate without a memory card or via NVR.



Using the <u>video storage calculator</u>, you can calculate the NVR or camera required storage capacity and estimated recording time based on the video stream settings.

#### **BulletCam HL enables you to:**

- 1. Watch the video in real-time with the ability to zoom in for a closer look.
- 2. Access archived videos, navigating through them based on recording chronology and calendar (this feature is available if a microSD memory card is installed in the camera, or it is connected to NVR with an installed hard disk).
- **3.** Configure motion detection zones and adjust sensitivity level.
- **4.** View the **Video wall** that combines images from all connected cameras.
- **5.** Quickly access <u>automation device</u> control from the cameras' video player menu.
- **6.** <u>Create video scenarios</u> that send a short video from the selected camera to the Ajax app when the security detector is triggered.
- 7. Download the required segments of video recordings from the archive to smartphones or PCs (this feature is available if a microSD memory card is installed in the camera, or it is connected to NVR with an installed hard disk).



The video recording segments downloaded from BulletCam HL have the **Ajax digital signature** that verifies the integrity of the exported video. To verify the authenticity of the downloaded video recordings, use the **Ajax Media Player** tool.

Learn more about Ajax media player

#### How to configure temporary camera video access

**8.** Configure connection via ONVIF to integrate the device with video management systems (VMS) such as Milestone, Genetec, Axxon, and Digifort.

#### How to configure ONVIF authorization

### Video scenarios

The Ajax system supports using IP cameras for alarm verification. Video scenarios enable the substantiation of alarm triggers with the corresponding video from cameras installed at the facility.

Cameras can be configured to respond to alarms from a single device, multiple devices, or all connected devices. Combined detectors can register various types of alarms, allowing you to configure responses to a wide range of alarm types, whether it's just one, several, or all of them.

#### Learn more

You can also configure the <u>sirens</u> to activate when motion or a specific Al-recognised object is detected. When video devices detect motion or a specific Al-recognised object, the system automatically activates sirens added to the hub to sound an alarm.

#### Learn more

## Video wall

The user can manage videos on the **Video wall** tab, accessible once at least one camera has been added. This feature ensures quick access to all connected cameras, displayed in accordance with privacy settings.

#### In mobile Ajax apps, you can:

1. Switch between cameras.

- **2.** Search for the desired camera by name.
- **3.** Manage a PTZ camera.

#### In Ajax PRO Desktop, you can:

- 1. Switch between cameras.
- 2. Search for the desired camera by name.
- **3.** Organize cameras by room, NVR, or group.
- 4. Manage a PTZ camera.
- **5.** Save customized layouts for displaying video from cameras.
- **6.** Change the order in which the camera video is displayed.
- 7. Create templates for displaying videos in a slide show.

How to use the video wall widget in Ajax PRO Desktop

What keyboard shortcuts are available in Ajax PRO Desktop

## **Privacy zones**

The system allows hiding parts of the frame. For instance, if a safe is in view, activity around it can be recorded without revealing its contents by setting up the right zone. No motion or object will be detected and recorded in the privacy zone.

To do this, in Ajax apps:

- 1. Go to the **Devices** tab.
- **2.** Select the camera from the list. If it is connected to the network video recorder, find **NVR** and tap on **Cameras**.
- **3.** Go to the device states by tapping the gear icon  $\mathfrak{D}$ .

- **5**. Select the **Privacy zones** menu.
- **6.** Open the **Configure privacy zones** menu and select the required area.

0:00 / 0:09

7. Tap the  $\checkmark$  icon and return to the camera settings.

The user can create up to four private zones.

## Firmware update

If a new firmware version for BulletCam HL is available, the icon appears in Ajax apps in the Devices tab. An admin or a PRO with access to the system settings can launch an update via device states or settings. The on-screen instructions help to update the firmware successfully.

## Selecting the installation site



When choosing the optimal location to install BulletCam HL, consider the presence of objects or structures that may obstruct the device's view.

#### How to install an Ajax camera for better AI recognition

Consider the placement recommendations when designing the security system project for your object. The security system should be designed and installed by professionals. A list of recommended partners is available here.

#### The camera should not be installed

- **1.** Indoors or outdoors where the temperature and humidity levels do not align with the specified **operating parameters**.
- **2.** In locations where objects or structures might obstruct the camera's view.
- **3.** In direct bright light or on bright objects (e.g., a white wall), as it can reduce the image quality. The bright surface reflects the IR backlight and blinds the camera in the dark.

### Installation



Before installing BulletCam HL, ensure that you have chosen the optimal location that complies with the requirements of this manual.

When connecting an external power supply and using BulletCam HL, follow the general electrical safety regulations for using electrical appliances, as well as the requirements of regulatory legal acts on electrical safety.


#### To install the device:

- 1. Connect the Ethernet cable to the camera. If it is powered by PoE, no external power supply is needed; otherwise, connect both the external power supply and the Ethernet cable.
- **2.** Turn on the power supply of the camera. The LED indicator on the cable connector lights up green.
- 3. Add the camera to the system, and disconnect the Ethernet and power supply from the camera.
- **4.** Using the bundled hexagon key (Ø 2 mm), remove the screws holding the protective cover. Insert a microSD card (not included) into the appropriate slot. Replace the protective cover and tighten the screws.




After adding the device to the system, format the memory card in the camera settings.


- **5.** Use the installation template to mark the locations for the drill holes on the surface where you plan to mount the camera. Secure the template to the chosen installation location with tape, and drill four holes as indicated on the template.
- **6.** Loosen the screw on the swivel mounting bracket with the bundled hexagon key (Ø 2 mm) and rotate the bracket if you need to change the cable channel position. Tighten the screw back.

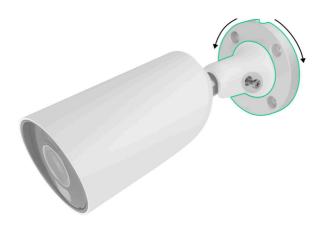

**7.** Route the cable through the cable channel and secure the swivel mounting bracket to the surface using the bundled screws.

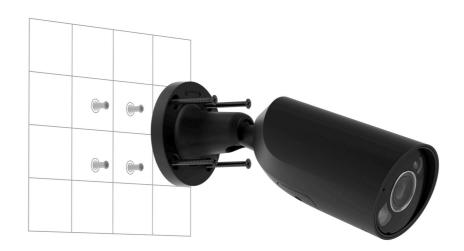

**8.** Loosen the screw on the swivel mounting bracket to adjust the camera tilt and rotation position.

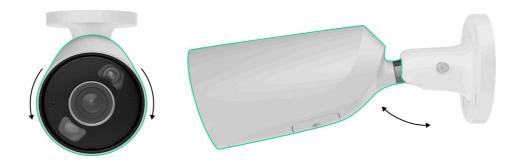

- **9.** Ensure that the camera lens faces the protected area. Secure it by tightening the screw in the swivel mounting bracket.
- **10.** Connect the Ethernet and power supply to the camera. Install a waterproof connector if the camera is used indoors with humidity

levels outside the operating parameters, or outdoors.



The recommended electrical parameters for the power supply are  $12 \text{ V}-\pm 20\%$  with a current of at least 1 A.



**11.** Turn on the power supply of the camera. The LED indicator on the cable connector lights up green.

## Adding to the system

## Before adding a device

- 1. Install an Ajax app.
- **2.** Log in to your **account** or create a new one.
- **3.** Select a **space** or create a new one.
- **4.** Add at least one virtual room.
- **5.** Ensure the space is disarmed.



Only a PRO or a space admin with the rights to configure the system can add the device to the space.

### Types of accounts and their rights

## Adding to the space

- 1. Open the Ajax app. Select a space to which you want to add the device.
- 2. Go to the **Devices** tab and tap **Add device**.
- **3.** Scan the QR code or enter the device ID manually. A QR code with an ID is placed on the device enclosure. Also, it is duplicated on the device packaging.
- 4. Assign a name to the device.
- **5.** Select a virtual room and a security group (if **Group mode** is enabled).
- **6.** Tap **Add device** to proceed.
- **7.** Wait for BulletCam HL to establish the connection. Once connected, you will see the live image from the device.
- **8**. Tap **Finish** to add the device.

The connected device will now appear in the list of devices in an Ajax app.

Note that BulletCam HL is compatible with only one space. To connect the device to the new space, remove it from the device list of the old one. This removal process needs to be done manually in an Ajax app.



You can calculate the number of cameras and NVRs that can be added to the space using the video device calculator.

## Pairing with an Ajax NVR

If BulletCam HL has already been added to the space as a standalone device, you can easily pair it with an Ajax NVR. If not, refer to the **Adding** to the space section to know how to add BulletCam HL to the NVR or as a standalone device.

To pair BulletCam HL with the NVR, in an Ajax app:

- 1. Go to the **Devices** tab.
- 2. Select **NVR** from the list and tap **Cameras**.
- **3.** Tap **Add camera** and wait until the network scan is complete and the available devices connected to the local network are displayed.



Note that BulletCam HL must be connected to the same local network as the NVR

- 4. Select the device.
- **5.** Assign a name to the device, select a virtual room and a group, then tap **Finish**.
- **6.** Wait for the system to add the device, then tap **Close**.

The device will now appear in the list of NVR cameras in an Ajax app.

## Resetting to the default settings

To reset the camera to the default settings:


- **1.** Turn off the camera by disconnecting the external power supply or Ethernet cable (if it is powered by PoE).
- 2. Press and hold the reset button.
- **3.** Power the camera while the reset button is pressed, and wait until the button's LED indicator lights up violet. This will take about 50 seconds.



The button's LED indicator lights up blue for 20 seconds after powering the camera with a pressed reset button. Then it turns off for 30 seconds and lights up violet. This means that the camera has been restored to the default settings.

#### **4.** Release the button.

## **Icons**

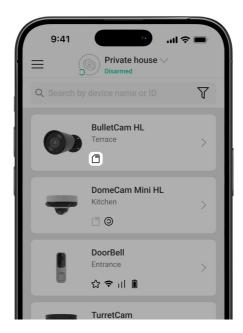

Icons in an Ajax app display some of BulletCam HL's states. You can check icons in the **Devices** tab.

lcon	Value
☆	The extra services are activated according to the subscription.  Learn more
(a)	The device operates in <b>Night mode</b> . <b>Learn more</b>
	The microSD card is not installed.
	The microSD card is installed.
	A malfunction of the microSD card is detected. Formatting the microSD card is recommended.
	The microSD card is being formatted.

C	Firmware update is available. Go to the device states or settings to find the description and launch an update.
Updating	Firmware update is in progress: downloading/installing the latest version.
<del>2</del>	The new firmware installation has failed.
Offline	The device has lost connection with the Ajax Cloud server.
ONVIF	The device connection via ONVIF is enabled.  Learn more
	There is no access to view the device's video.

#### **States**



The states include information about the device and its operating parameters. You can find BulletCam HL states in Ajax apps:

- 1. Go to the **Devices** tab.
- 2. Select **BulletCam HL** in the list. Optionally, if the camera is connected to the video recorder, find **NVR**, tap **Cameras**, and select **BulletCam**

# **3.** Tap the gear icon <sup>™</sup>.

Parameter	Meaning
Extra services	The field is available in <b>Ajax PRO apps</b> and displayed when extra services are available or activated for the device according to the subscription.  Tapping the field shows the information about assigned services and contacts of the company providing these services. <b>Learn more</b>
Malfunction	Tapping (i) opens the list of device malfunctions.  The field is displayed only if a malfunction is detected.
Firmware update	<ul> <li>The field is displayed when the firmware update is available:</li> <li>New firmware version available — the new firmware is available for download and installation.</li> <li>Downloading — firmware downloading is in progress. It is displayed as a percentage.</li> <li>Installing — the firmware is being installed.</li> <li>Failed to update firmware — the new firmware could not be installed.</li> <li>Tapping i opens more information about the device's firmware update.</li> </ul>


Connection	<ul> <li>Status of the device internet connection via Ethernet:</li> <li>Online — the device is connected to the network. Normal state.</li> <li>Offline — the device is not connected to the network. Please check your wired internet connection.</li> <li>Tapping i displays the network parameters.</li> </ul>
Connection to NVR	Displayed when the device is connected to the NVR.  Status of the device connection to the NVR:  Online — the device is connected to the network via the NVR. Normal state.  Offline — the device is not connected to the network via the NVR. Please check your wireless internet connection.  Tapping i displays the network parameters.
Storage location	<ul> <li>Displays the list of storage devices connected to BulletCam HL:</li> <li>Memory card — data is recorded on a memory card (not included) installed in the camera.</li> <li>NVR hard drive — data is recorded on the NVR hard disk.</li> <li>Tapping i displays the recording mode and storage settings.</li> </ul>
Memory card	Status of the memory card connection to the camera:  • OK — the memory card is communicating with the camera.

	Normal state.
	<ul> <li>Error – there is an error in the memory card operation. Check details by tapping the i icon. Follow the instructions provided in the app.</li> </ul>
	<ul> <li>Not installed — the memory card is not installed in the camera.</li> </ul>
	<ul> <li>Requires formatting — the memory card formatting is recommended. If the memory card contains data, it will be permanently deleted.</li> </ul>
	<ul> <li>Formatting – the memory card is being formatted.</li> </ul>
Resolution	The current camera resolution.
Frame rate	The current camera frame rate.
Bit rate	The current camera bit rate.
Video codec	The current video codec:  • H.264  • H.265
Motion detection	The Motion detection feature status:  On Off
Object detection	The Object detection feature settings:  Human  Pet  Vehicle  Off

ONVIF integration	Shows the current status of the device's ONVIF integration.  This state is displayed only when ONVIF integration is enabled.	
Permissions to view	Displays the number of users who have access to view video from the device.  Tapping i displays the list of users, installers, and companies with access under certain conditions.  The state is not available in Ajax PRO apps.	
Uptime	The device's operating time since the last reboot.	
Alarm reaction		
Operating mode	<ul> <li>Instant alarm — the armed device immediately reacts to a threat and raises the alarm.</li> <li>Entry/Exit — when a delay is set, the armed device starts the countdown and doesn't raise the alarm even if triggered until the countdown ends.</li> <li>Follower — the device inherits the delays from Entry/Exit devices. However, when the Follower is triggered individually, it immediately raises the alarm.</li> </ul>	
Delay when entering	Delay when entering (alarm activation delay) is the time the user has to disarm the security system after entering the premises.  Learn more	

Delay when leaving	Delay when leaving (arming delay) is the time the user has to leave the premises after arming.  Learn more
Arm in Night mode	When this option is enabled, the device will enter the armed mode when the system is set to <b>Night mode</b> .  Learn more
Night mode delay when entering	Entry delay time in <b>Night mode</b> . Delay when entering (alarm activation delay) is the time the user has to disarm the security system after entering the premises. <b>Learn more</b>
Night mode delay when leaving	Exit delay time in <b>Night mode</b> . Delay when leaving (arming delay) is the time the user has to leave the premises after arming. <b>Learn more</b>
Firmware	Device firmware version.
Device ID	Device ID. It is also available on the QR code on the device enclosure and its package box.

# **Settings**

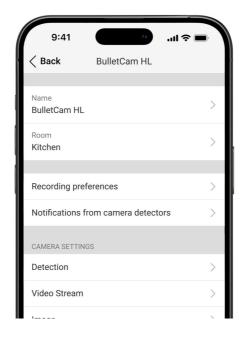

To change camera settings, in an Ajax app:

- 1. Go to the **Devices** tab.
- **2.** Select **BulletCam HL** from the list. If BulletCam HL is connected to the video recorder, select **NVR** and tap **Cameras**.
- **3.** Go to **Settings** by tapping the gear icon  $\mathfrak{S}$ .
- **4.** Set the required parameters.
- **5.** Tap **Back** to save the new settings.

Settings	Value
Name	Device name. It is displayed in the list of hub devices, text of SMS and notifications in the events feed.
	To change the device name, tap the text field.
	The name can contain up to 24 Latin characters or up to 12 Cyrillic characters.
Room	Selecting the virtual room to which BulletCam HL is assigned.

	The room name is displayed in the text of SMS and notifications in the events feed.
Recording preferences	Selection of the Recording mode for each storage:  On detection or scenario  Continuous  Never  Selection of the armed mode when the camera records video:  When armed  Always
Notifications from camera detectors	Opens a menu with Notifications from camera detectors settings.  Learn more
Detection	Opens a menu with <b>Detection</b> settings. <b>Learn more</b>
Video stream	Opens a menu with <b>Video stream</b> settings. <b>Learn more</b>
lmage	Opens a menu with <b>Image</b> settings. <b>Learn more</b>
Audio	<ul> <li>Settings for audio capture and playback.</li> <li>Audio capture and playback — turn on to watch and record videos with audio.</li> <li>Audio codec.</li> </ul>

	<ul> <li>Bit rate.</li> <li>Sample rate.</li> <li>Microphone gain — configure the microphone sensitivity level based on the installation location.</li> </ul>
Privacy zones	Allows the user to select zones that are not displayed on the camera video. Instead, the user sees a black rectangle.  Learn more
Alarm reaction	Opens a menu with <b>Alarm reaction</b> settings. <b>Learn more</b>
Firmware update	Switches the device to the firmware updating mode if a new version is available.  Learn more
Connection	The setting for selecting the camera's connection type to the Ajax Cloud service via Ethernet.  Available connection types:  DHCP  Static
Memory card	Selection of the maximum archive depth. It can be set in the range of 1 to 360 days or can be unlimited.  Allows the user to format the cloud archive.
Service	Opens a menu with <b>Service</b> settings. <b>Learn more</b>

Monitoring	This setting is available only in Ajax PRO apps.  Allows a PRO with rights to configure the system to set up:  Zone number for CMS events — unique identifier of the device in events it reports to CMS;  Send events on detections to CMS — whether the device will send
Report a problem	notifications on motion or object detection to CMS.  Allows the user to describe a problem and send a report.
User guide	Opens the BulletCam HL user manual in an Ajax app.
Unpair from NVR	Unpairs the device from the NVR to which it was paired.  The option is available if the device is paired with the NVR.
Delete device	Erases all device settings and deletes the device from the space. Also, it unpairs the device from the NVR if such a connection is set up.

# **Notifications from camera detectors**

Settings	Meaning
Notify if detected	The user can select the type of object or motion, and when it's recognized, a

notification is received and sirens are activated: Human Pet Vehicle **Any motion** Note that the corresponding types of object or motion should be enabled in the **Detection** settings. To specify whether motion detection should activate the sirens, tap the required type of object or motion and enable the Activate sirens upon detection option. The feature is available when the camera and at least one siren are added to an Ajax hub with OS Malevich 2.31 and later versions. Learn more Selection of the mode when the camera sends notifications: When to notify When camera armed **Always** Notification delay and interval Interval in reporting similar events Selecting the time interval in reporting similar events: from 30 seconds to 8 hours. The default interval is 3 minutes. Selected time applies for each detection type separately and helps to avoid repeated

	informing of the same triggering reason.
Duration of object detection for notification	Selecting how long an object should remain in the camera's field of view so the system sends a notification about the detected object. The available values are <b>Notify instantly</b> or <b>2</b> , <b>3</b> , <b>4</b> , or <b>5 seconds</b> .  The default time is <b>2 seconds</b> .

# **Detection settings**

Settings	Meaning
Motion detection	When the option is enabled, the camera detects motion using its built-in software.
Analyze image	The software algorithm of image analysis that is used for motion detection.  The option is available when <b>Motion detection</b> is enabled.
Motion detection settings	<ul> <li>Opens a menu with motion detection settings:</li> <li>Adjust activity zone — defines the specific area within the field of view where the camera should detect motion.</li> <li>Sensitivity threshold — defines the device's sensitivity to the motion in the activity zone.</li> <li>Area occupied by detectable objects — specifies the size of the area in the camera's field of view that a moving object should occupy for the device to be triggered.</li> </ul>

	The option is available when <b>Motion detection</b> is enabled.
Object detection	When the option is enabled, the camera identifies the type of moving objects using a built-in algorithm. In the video, people, pets, and vehicles are highlighted with colored rectangles.
	Opens the menu with object detection settings:
Object detection settings	<ul> <li>Adjust object detection zone — defines the specific area within the field of view where the camera should identify the type of moving objects.</li> </ul>
	<ul> <li>Human detection — enables detection of people in the video.</li> </ul>
	<ul> <li>Pet detection — enables detection of pets in the video.</li> </ul>
	<ul> <li>Vehicle detection — enables detection of vehicles in the video.</li> </ul>
	<ul> <li>Sensitivity threshold — defines the accuracy of the object recognition. The setting is available for each object type.</li> </ul>
	The option is available when <b>Object</b> detection is enabled.

# Video stream settings

Settings for mainstream and substream parameters.

Settings	Value
Mainstream	
Video codec	Selecting the video compression standard:

	<ul><li>H.264</li><li>H.265</li></ul>
Resolution	Selecting the mainstream resolution (depending on the camera's version):  • 1024 × 576  • 1920 × 1080  • 2304 × 1296  • 2560 × 1440  • 2592 × 1944  • 2880 × 1620  • 2944 × 1656  • 3072 × 1728  • 3840 × 2160
Frame rate	Selecting the frame rate: from 3 to 25 with an increment of 1 frame/s.
Bit rate type	<ul><li>Selecting the bit rate type:</li><li>Variable (VBR)</li><li>Constant (CBR)</li></ul>
Bit rate	Setting the bit rate in kbit/s.
GOP length	Selecting the GOP length: from 1 to 250 with an increment of 1 frame.
VBR quality/CBR quality	Selecting the compression quality: from 0 to 100 with an increment of 1.
Subs	tream
Video codec	Selecting the video compression standard:

	<ul><li>H.264</li><li>H.265</li></ul>
Resolution	<ul> <li>Selecting the substream resolution:</li> <li>720 × 480</li> <li>720 × 576</li> <li>1024 × 576</li> </ul>
Frame rate	Selecting the frame rate: from 3 to 25 with an increment of 1 frame/s.
Bit rate type	Selecting the bit rate type:  Variable (VBR)  Constant (CBR)
Bit rate	Setting the bit rate in kbit/s.
GOP length	Selecting the GOP length: from 1 to 250 with an increment of 1 frame.
VBR quality / CBR quality	Selecting the compression quality: from 0 to 100 with an increment of 1.

# Image settings

Settings for camera image quality.

Settings	Value
Brightness	Adjusting the image brightness.
Color saturation	Adjusting the image color saturation.
Sharpness	Adjusting the image sharpness.

Contrast	Adjusting the image contrast.
Image rotation	<ul> <li>Default view — the camera image is displayed as captured by the lens, without rotation. Use this option if the camera is installed in the standard upright position.</li> <li>180° — the camera image is rotated by 180 degrees. Use this option if the camera is installed upside down (e.g., on a ceiling).</li> </ul>
Wide dynamic range (WDR)	Enabling or disabling the WDR.  When WDR is enabled, it helps to enhance the camera images, with too dark or too bright areas.
Lighting stabilization	<ul> <li>Adjusting the exposure:</li> <li>1-2.9 — adjusting WDR levels.</li> <li>3-5 — activating and adjusting HDR levels.</li> <li>This setting is available if Wide dynamic range (WDR) is enabled.</li> </ul>
Day/Night mode	<ul> <li>Selecting the camera vision mode depending on the light conditions:</li> <li>Day — IR backlight is always off.</li> <li>Night — IR backlight is always on.</li> <li>Auto — IR backlight automatically switches according to the Mode switching conditions settings.</li> </ul>
Mode switching conditions	Selecting the conditions for switching between the day and night modes:

	<ul> <li>Later to Night / Earlier to Day</li> <li>Medium</li> <li>Earlier to Night / Later to Day</li> <li>This setting is available if Day/Night mode is set to Auto.</li> </ul>
Scene illumination	<ul> <li>Disabled — the camera does not use any built-in illumination. The mode is suitable for well-lit areas or when external lighting is used.</li> <li>Infrared light — the camera uses IR illumination to capture black-and-white images in low-light conditions. IR light is invisible to the human eye and does not attract attention.</li> <li>White LED — the camera uses a visible white LED to illuminate the scene. The mode provides color video at night and can deter intruders by attracting attention.</li> <li>Hybrid light — the camera operates in the Infrared light mode by default. When Al-powered object detection is triggered, the white LED turns on to provide color images.</li> </ul>

	Adjusting the intensity of the IR backlight:
	• Auto
Infrared illumination (IR) mode	• Custom
	The setting is used to capture clear black- and-white images at night or in low light and ensures visibility using IR LEDs when conventional lighting is ineffective.
	This setting is available if <b>Scene</b> illumination is set to Infrared light.
	Adjusting the IR light intensity.
IR intensity	This setting is available if Infrared illumination (IR) mode is set to Custom.
	Adjusting the white LED illumination intensity:
	• Auto
	• Custom
White LED illumination mode	The setting is used to capture clear color images at night or in low light and ensures visibility using white LEDs when normal lighting is ineffective.
	This setting is available if Scene illumination is set to White LED.
LED intensity	Adjusting the white LED illumination intensity.
	This setting is available if White LED illumination mode is set to Custom.
Set exposure based on	Selecting the frame area on which the exposure is based on:
	• Entire frame

	<ul> <li>Frame's top</li> <li>Frame's right</li> <li>Frame's bottom</li> <li>Frame's left</li> <li>Frame's center</li> </ul>
Exposure mode	<ul><li>Selecting the exposure mode:</li><li>Auto</li><li>Manual setup</li></ul>
Image preferences	Adjusting the shutter speed for less motion blur or for less noise in the image.  This setting is available if <b>Exposure mode</b> is set to <b>Auto</b> .
Exposure compensation	Ability to override automatic exposure settings to manually control the image brightness.  This setting is available if <b>Exposure mode</b> is set to <b>Auto</b> .
Shutter speed	Selecting the shutter speed to ensure correct exposure for the image.  This setting is available if <b>Exposure mode</b> is set to <b>Manual setup</b> .
Noise reduction	Enabling or disabling the noise reduction.
Parameter value	Adjusting the noise reduction level.  This setting is available if <b>Noise reduction</b> is enabled.
Anti-flicker (Power frequency)	Selecting the power grid frequency to reduce the image flickering. This setting is

used if the camera is capturing the video in
low-light conditions and lamps are
flickering on the camera image with the
power grid frequency. Available
parameters:

- 50 Hz
- 60 Hz
- **Disabled** anti-flicker is off.

# Alarm reaction settings

Settings	Meaning
Operating mode	Specify how this device will react to alarms:
	<ul> <li>Instant alarm — the armed device immediately reacts to a threat and raises the alarm.</li> </ul>
	<ul> <li>Entry/Exit — when a delay is set, the armed device starts the countdown and doesn't raise the alarm even if triggered until the countdown ends.</li> </ul>
	<ul> <li>Follower — the device inherits the delays from Entry/Exit devices.</li> <li>However, when the Follower is triggered individually, it immediately raises the alarm.</li> </ul>

Delay when entering	Selecting delay time when entering: 5 to 255 s.  Delay when entering (alarm activation delay) is the time the user has to disarm the security system after entering the premises.  Learn more
Delay when leaving	Selecting delay time when leaving: 5 to 255 s.  Delay when leaving (arming delay) is the time the user has to leave the premises after arming.  Learn more
Arm in Night mode	When enabled, the device switches to the armed mode when the system is set to Night mode.  Learn more
Night mode delay when entering	Delay time when entering in <b>Night mode</b> .  Delay when entering (alarm activation delay) is the time the user has to disarm the security system after entering the premises.  Learn more
Night mode delay when leaving	Delay time when leaving in <b>Night mode</b> .  Delay when leaving (arming delay) is the time the user has to leave the premises after arming. <b>Learn more</b>
Night mode delay	Delay time in <b>Night mode</b> : 5 to 255 seconds.

It is the time the user has to disable <b>Night</b>
mode (alarm activation delay) after the
Entry/Exit detector is triggered.

The setting is displayed if the device is set to the **Follower** operating mode and the **Arm in Night mode** option is enabled.

#### Learn more

# **Service settings**

Settings	Meaning
Time zone	Time zone selection.  It is configured by a user and is displayed when a user views video from the camera.
Connection via ONVIF	Configuring the device's connection via ONVIF to third-party VMSs.  Learn more
Server connection	
Delay of cloud connection loss alarm, sec	The delay helps reduce the risk of a false server connection loss event.  The delay can be set in the range of 30 to 600 seconds.
Cloud polling interval, sec	The frequency of polling the Ajax Cloud server is set in the range of 30 to 300 seconds.  The shorter the interval, the faster the cloud connection loss will be detected.

Get notified of serv	ver connection loss
without alarm	

When the toggle is enabled, the system notifies users about server connection loss using a standard notification sound instead of a siren alert.


### Indication

The green LED indicator is placed on the camera Ethernet connector.

Event	Indication
The network connection is established.	Lights up green.

### Malfunction

When the device detects a malfunction, a malfunction counter is displayed in the Ajax app in the upper left corner of the device icon. All malfunctions can be seen in the device <u>states</u>. Fields with malfunctions will be highlighted in red.

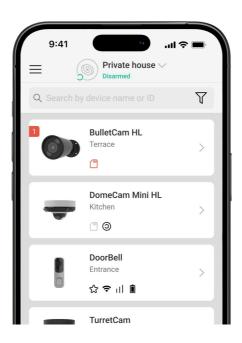

#### Malfunction is displayed if:

- The camera has lost connection with the server.
- The camera's storage device is malfunctioning. Press the camera's reset button or format the storage device in the camera settings.
- The storage device needs to be formatted. Format the storage device in the camera settings.

#### Maintenance

Regularly check the functioning of the device. If you notice any image degradation, loss of clarity, or darkening, check the camera for dirt. Clean the device enclosure from dust, cobwebs, and other contaminants as they emerge. Use soft, dry wipes suitable for equipment maintenance.

Do not use substances that contain alcohol, acetone, petrol, or other active solvents to clean the device. Wipe the lens carefully, as scratches can result in poor-quality images and camera failure.

## **Technical specifications**

Technical specifications for BulletCam HL (5 Mp/2.8 mm)

Technical specifications for BulletCam HL (5 Mp/4 mm)

Technical specifications for BulletCam HL (8 Mp/2.8 mm)

Technical specifications for BulletCam HL (8 Mp/4 mm)

Compliance with standards

## Warranty

The warranty for the products of the Limited Liability Company "Ajax Systems Manufacturing" is valid for 2 years after purchase.

If the device does not operate properly, we recommend contacting support service first, as most technical issues can be resolved remotely.

**Warranty obligations** 

**User Agreement** 

#### **Contact Technical Support:**

- e-mail
- Telegram

Manufactured by "AS Manufacturing" LLC