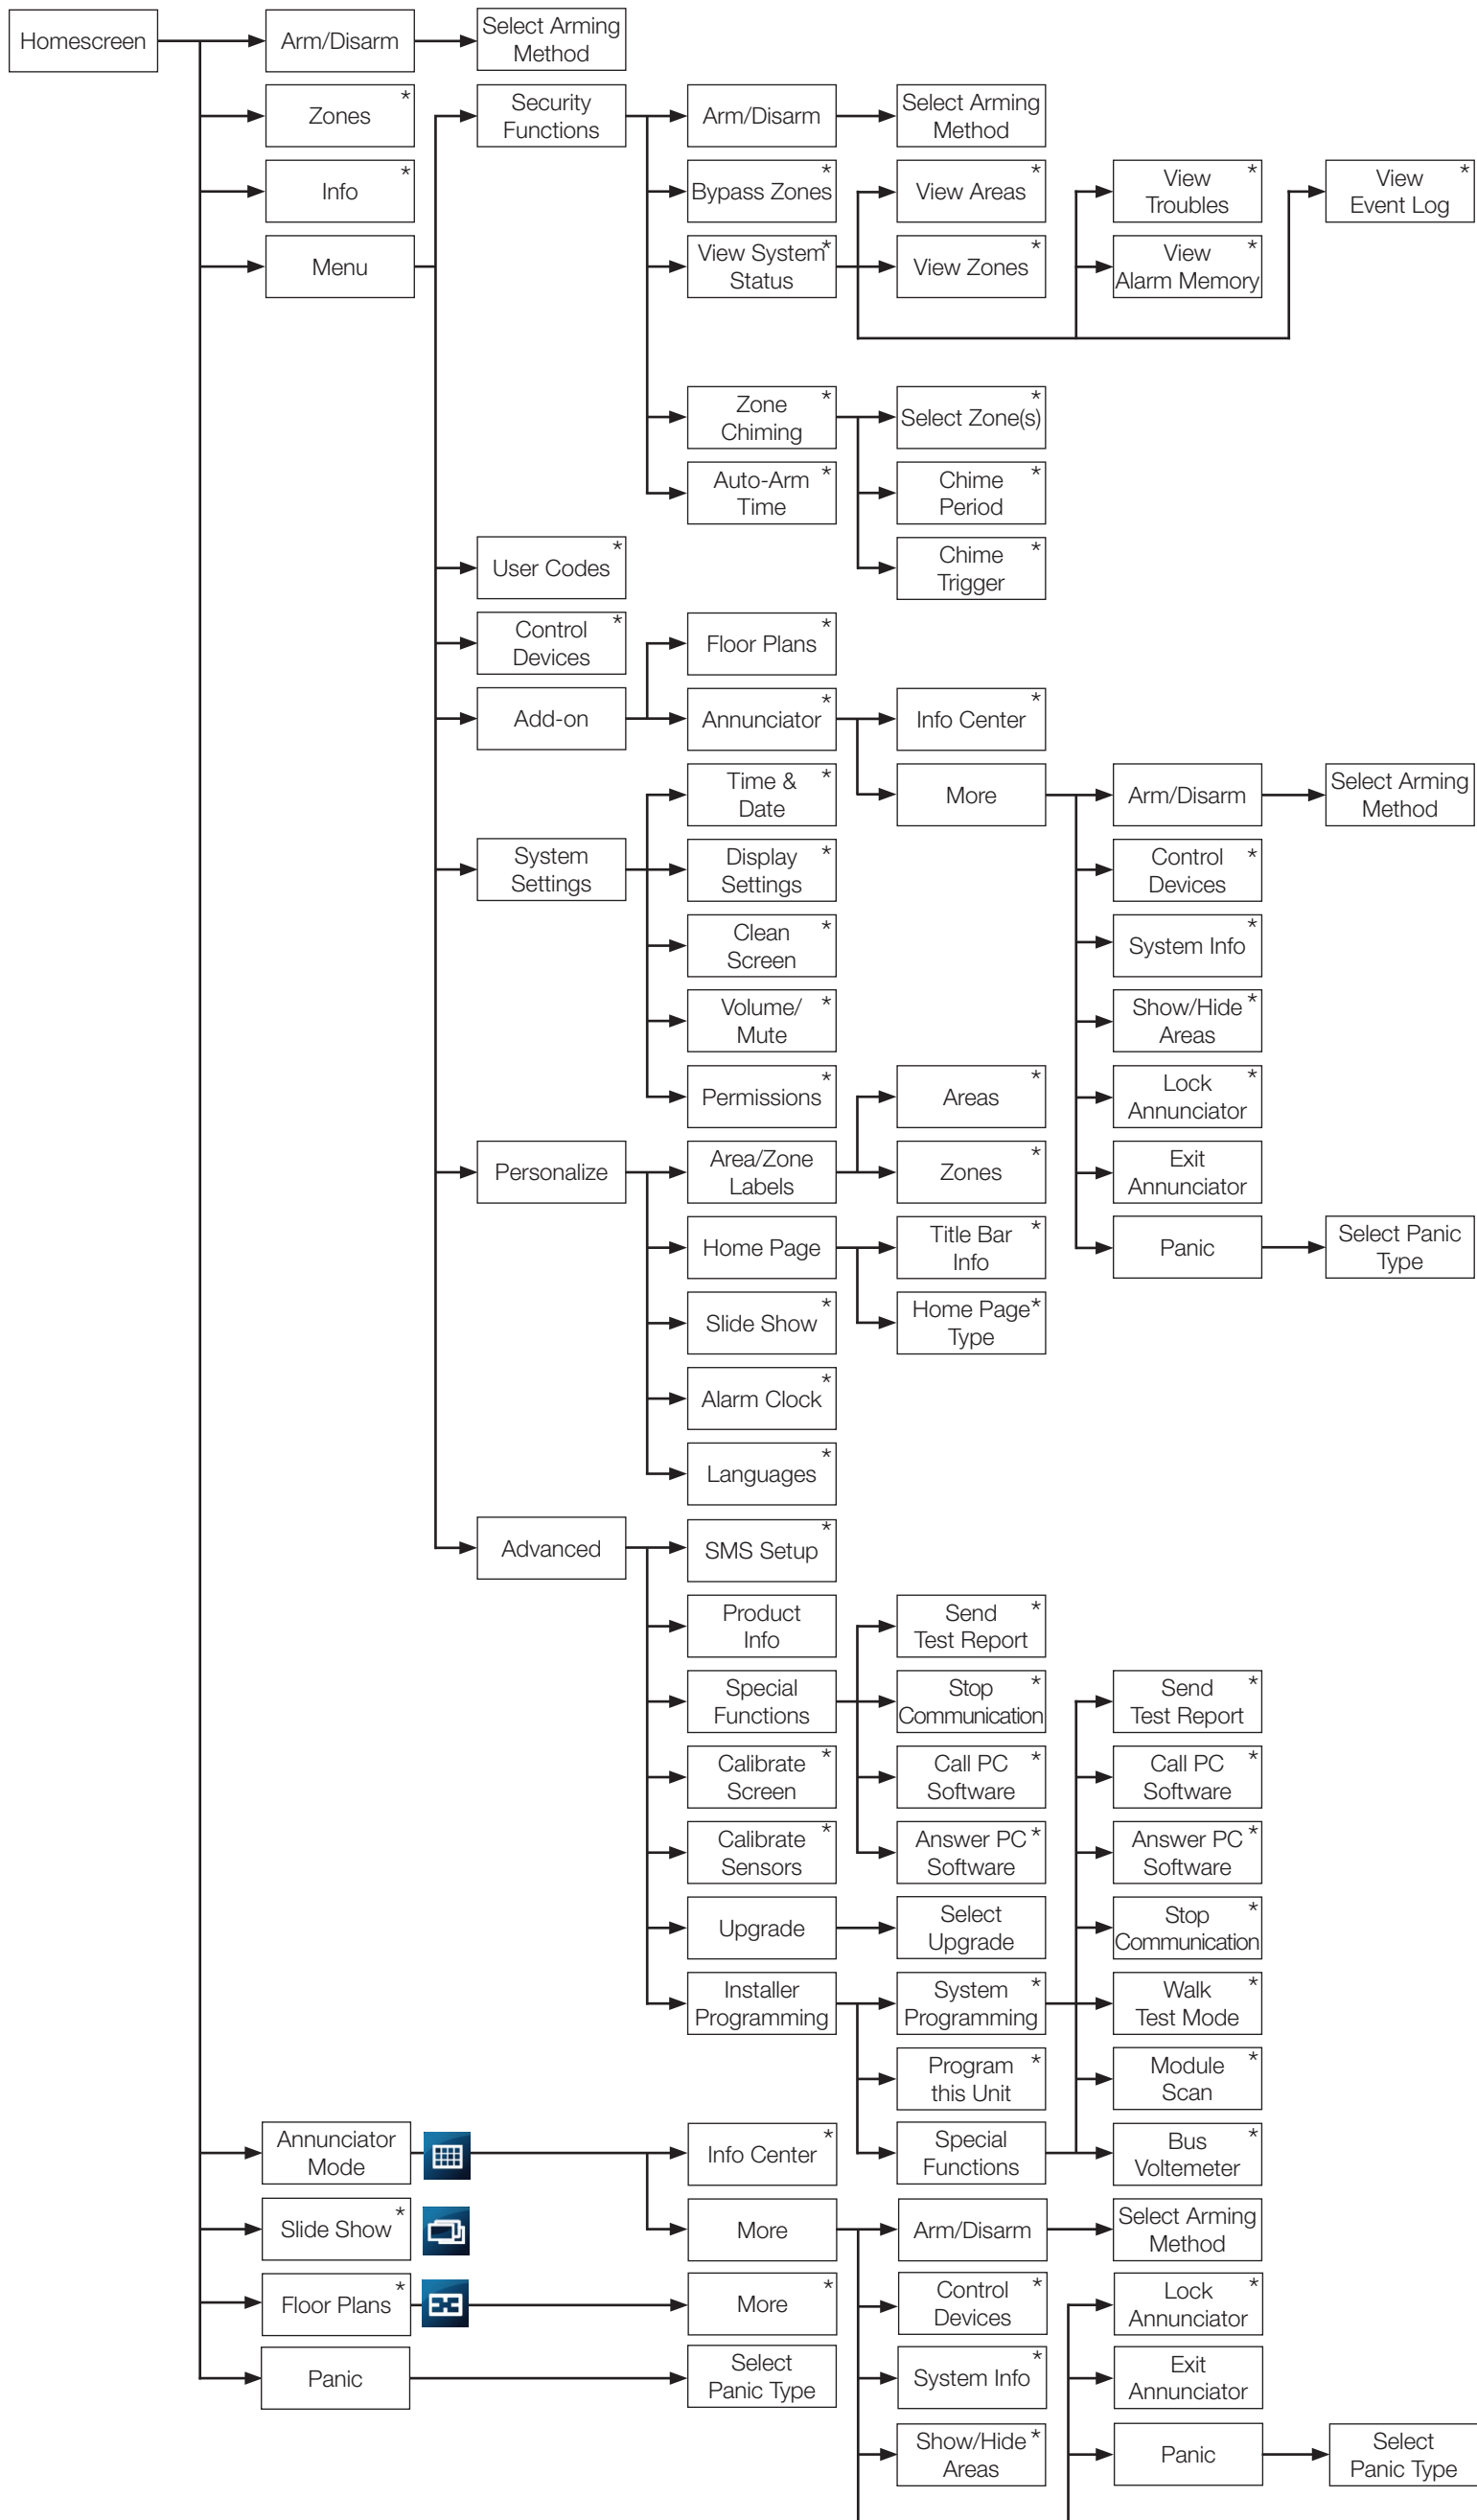# TM40 - EVO User/Installer Menu Overview

Touch Interface Module • V1.2 • TM40-EC00 • 09/2012

P △ R A △ D O X ™

The following document provides a simplified overview of the menus for the TM40 Interface Module for EVO systems.
Use this document as a quick help guide to identify where certain settings/options are located within the menus.

Homescreen

- Arm/Disarm → Select Arming Method
- Zones *
- Info *
- Menu
  - Security Functions
    - Arm/Disarm → Select Arming Method
    - Bypass Zones *
    - View System Status *
      - View Areas * → View Troubles * → View Event Log *
      - View Zones * → View Alarm Memory *
    - Zone Chiming * → Select Zone(s) *
    - Auto-Arm Time *
      - Chime Period *
      - Chime Trigger *
  - User Codes *
  - Control Devices *
  - Add-on
    - Floor Plans *
    - Annunciator *
      - Info Center *
      - More
        - Arm/Disarm → Select Arming Method
        - Control Devices
        - System Info *
        - Show/Hide Areas *
        - Lock Annunciator *
        - Exit Annunciator *
        - Panic → Select Panic Type
  - System Settings
    - Time & Date *
    - Display Settings *
    - Clean Screen
    - Volume/ Mute *
    - Permissions *
  - Personalize
    - Area/Zone Labels
      - Areas
      - Zones
    - Home Page
      - Title Bar Info
      - Home Page Type *
    - Slide Show *
    - Alarm Clock *
    - Languages *
  - Advanced
    - SMS Setup *
    - Product Info
      - Send Test Report *
    - Special Functions
      - Stop Communication *
        - Send Test Report *
    - Calibrate Screen *
      - Call PC Software *
        - Call PC Software *
    - Calibrate Sensors *
      - Answer PC Software *
        - Answer PC Software *
    - Upgrade
      - Select Upgrade
        - Stop Communication *
    - Installer Programming
      - System Programming *
        - Walk Test Mode
      - Program this Unit *
        - Module Scan
      - Special Functions *
        - Bus Voltemeter *

- Annunciator Mode
  - Info Center *
  - More *
    - Arm/Disarm → Select Arming Method
    - Control Devices *
    - Lock Annunciator *
    - Exit Annunciator *
    - System Info *
    - Show/Hide Areas *
    - Panic → Select Panic Type
- Slide Show *
- Floor Plans *
- Panic → Select Panic Type

* Additional options not shown

paradox.com

TM40 - MG/SP User Menu Overview

Touch Interface Module • V1.2 • TM40-EC00 • 09/2012

The following document provides a simplified overview of the menus for the TM40 Interface Module for MG/SP systems.
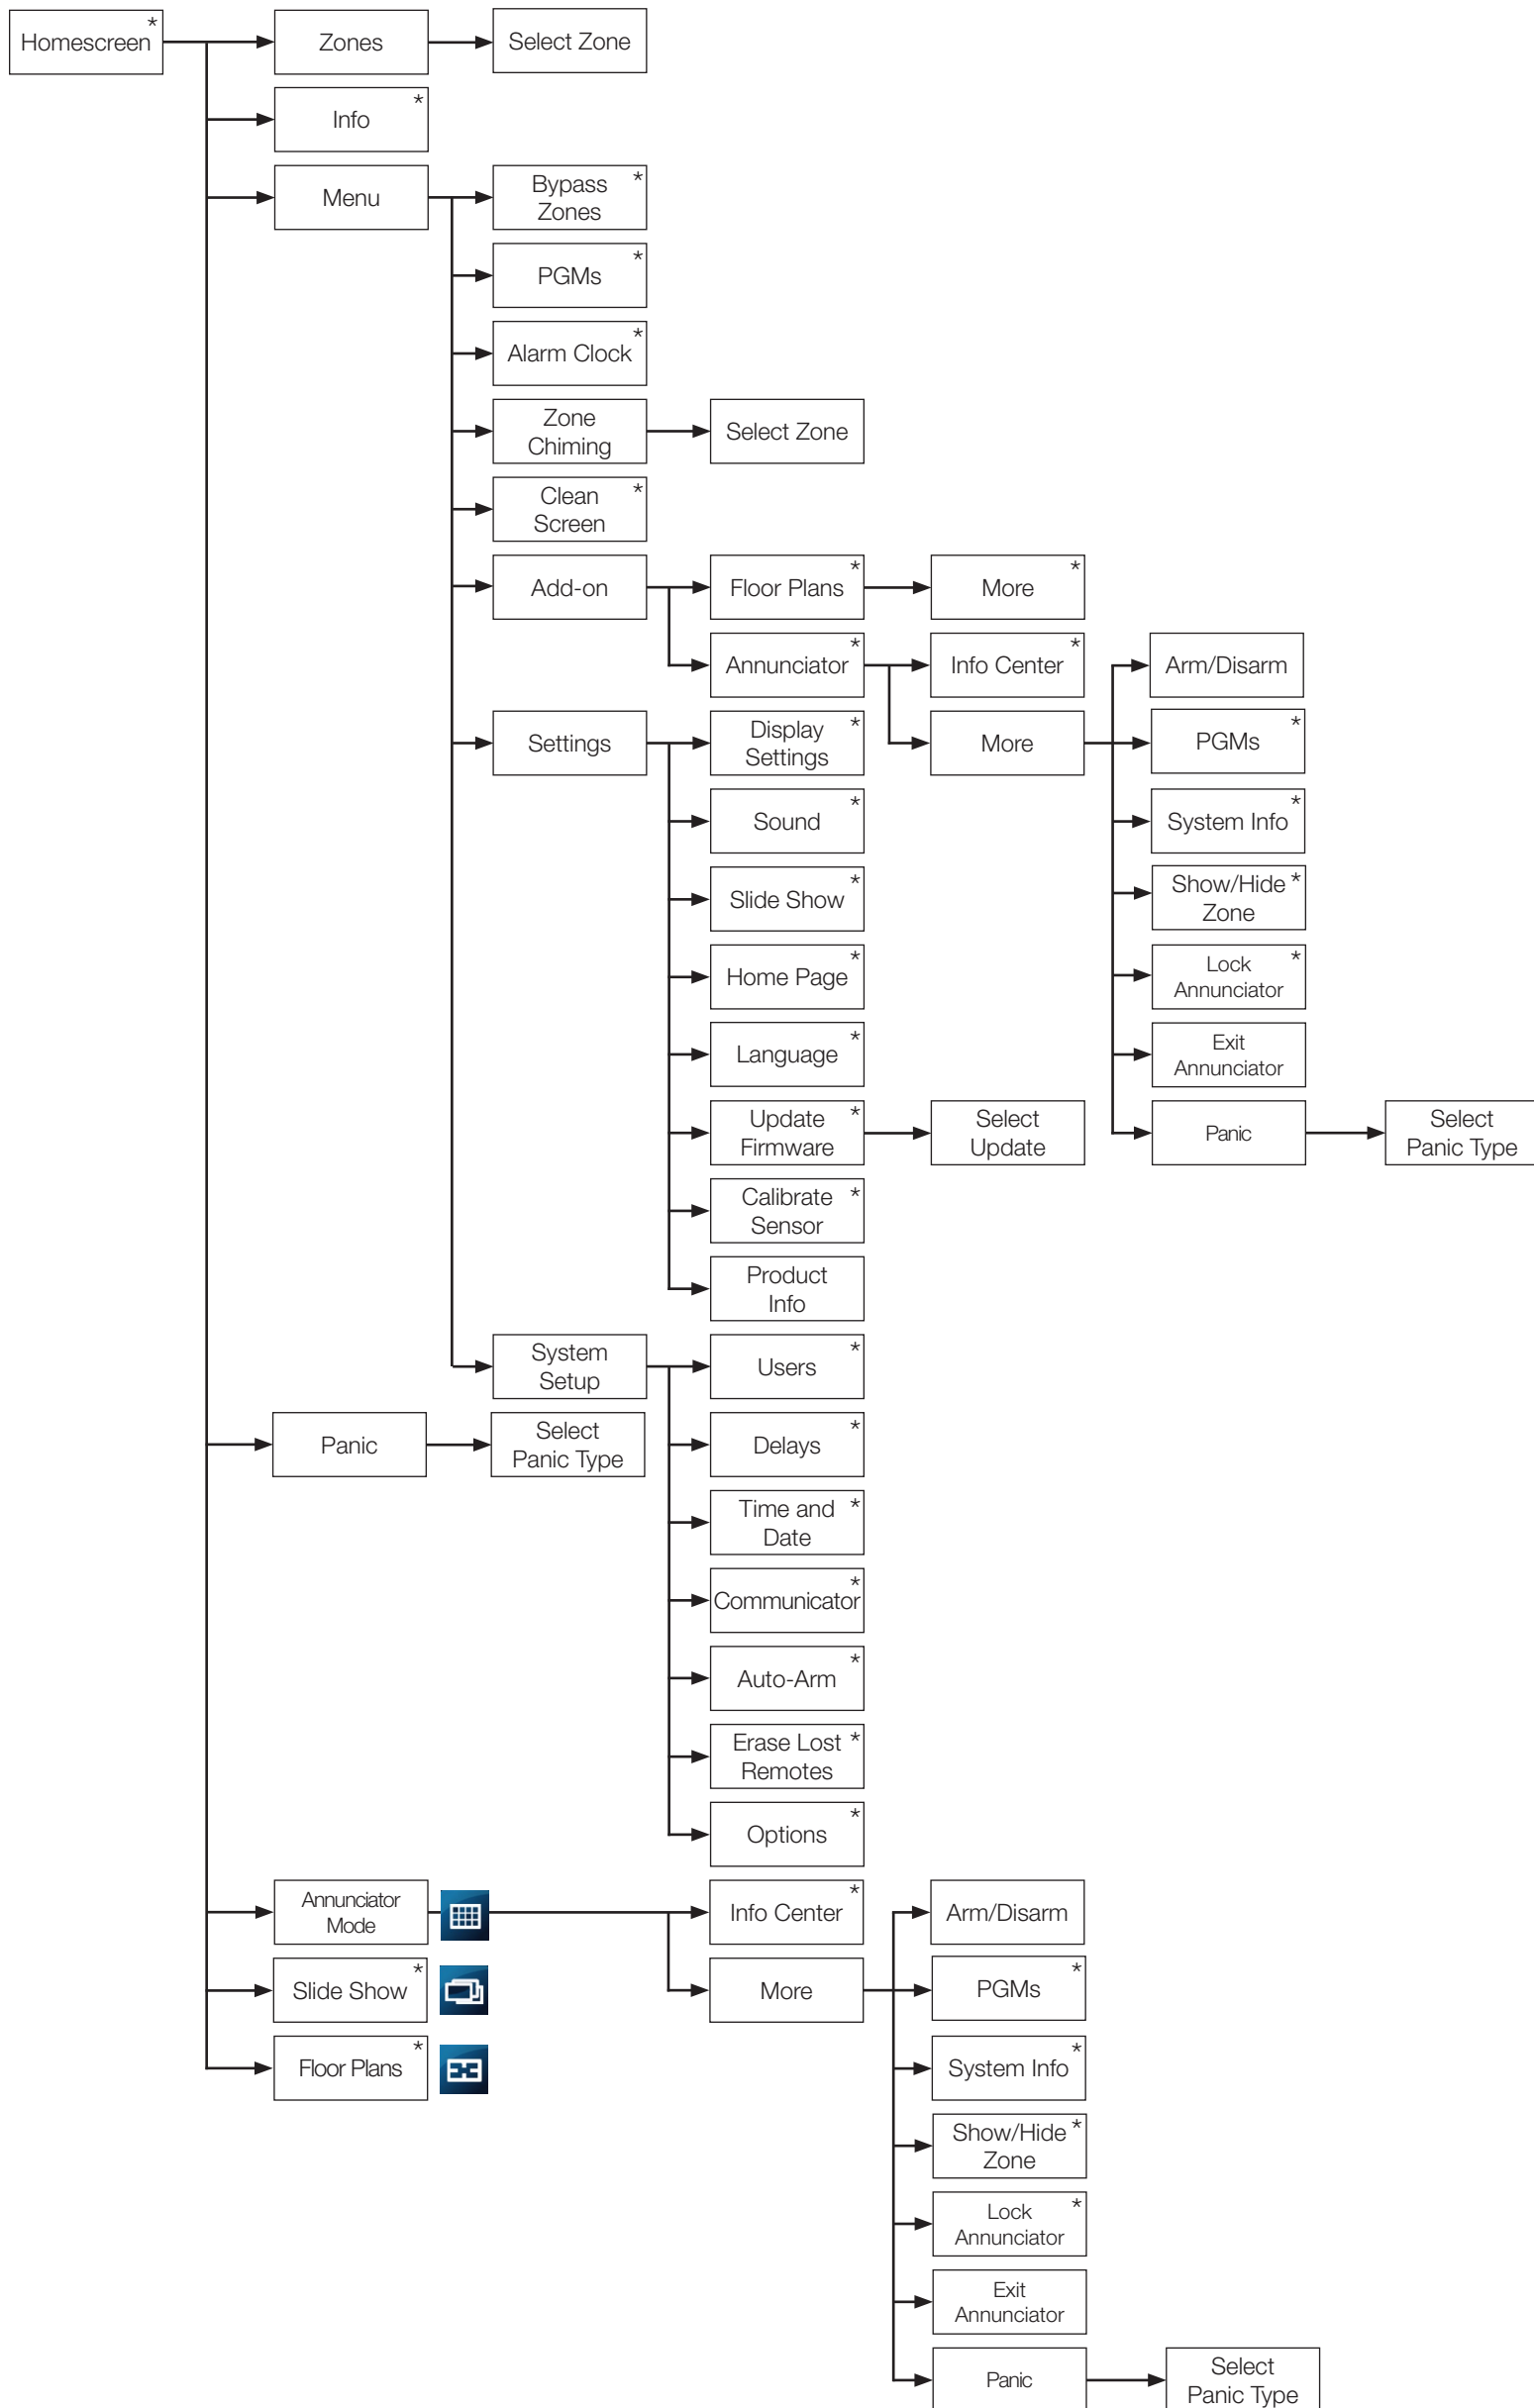**Use this document as a quick help guide to identify where certain settings/options are located within the menus.**

Homescreen *
- Zones → Select Zone
- Info *
- Menu
  - Bypass Zones *
  - PGMs *
  - Alarm Clock *
  - Zone Chiming → Select Zone
  - Clean Screen *
  - Add-on
    - Floor Plans * → More *
    - Annunciator
      - Info Center * → Arm/Disarm
      - More
        - PGMs *
        - System Info *
        - Show/Hide Zone *
        - Lock Annunciator *
        - Exit Annunciator
        - Panic → Select Panic Type
  - Settings
    - Display Settings *
    - Sound
    - Slide Show *
    - Home Page *
    - Language *
    - Update Firmware * → Select Update
    - Calibrate Sensor *
    - Product Info
  - System Setup
    - Users *
    - Delays *
    - Time and Date *
    - Communicator *
    - Auto-Arm *
    - Erase Lost Remotes *
    - Options
- Panic → Select Panic Type
- Annunciator Mode → Info Center *
  - More
    - Arm/Disarm
    - PGMs *
    - System Info *
    - Show/Hide Zone *
    - Lock Annunciator *
    - Exit Annunciator
    - Panic → Select Panic Type
- Slide Show *
- Floor Plans *

* Additional options not shown

PARADOX.COM

TM40 - MG/SP Installer Menu Overview

Touch Interface Module • V1.2 • TM40-EC00 • 09/2012

The following document provides a simplified overview of the menus for the TM40 Interface Module for MG/SP systems.
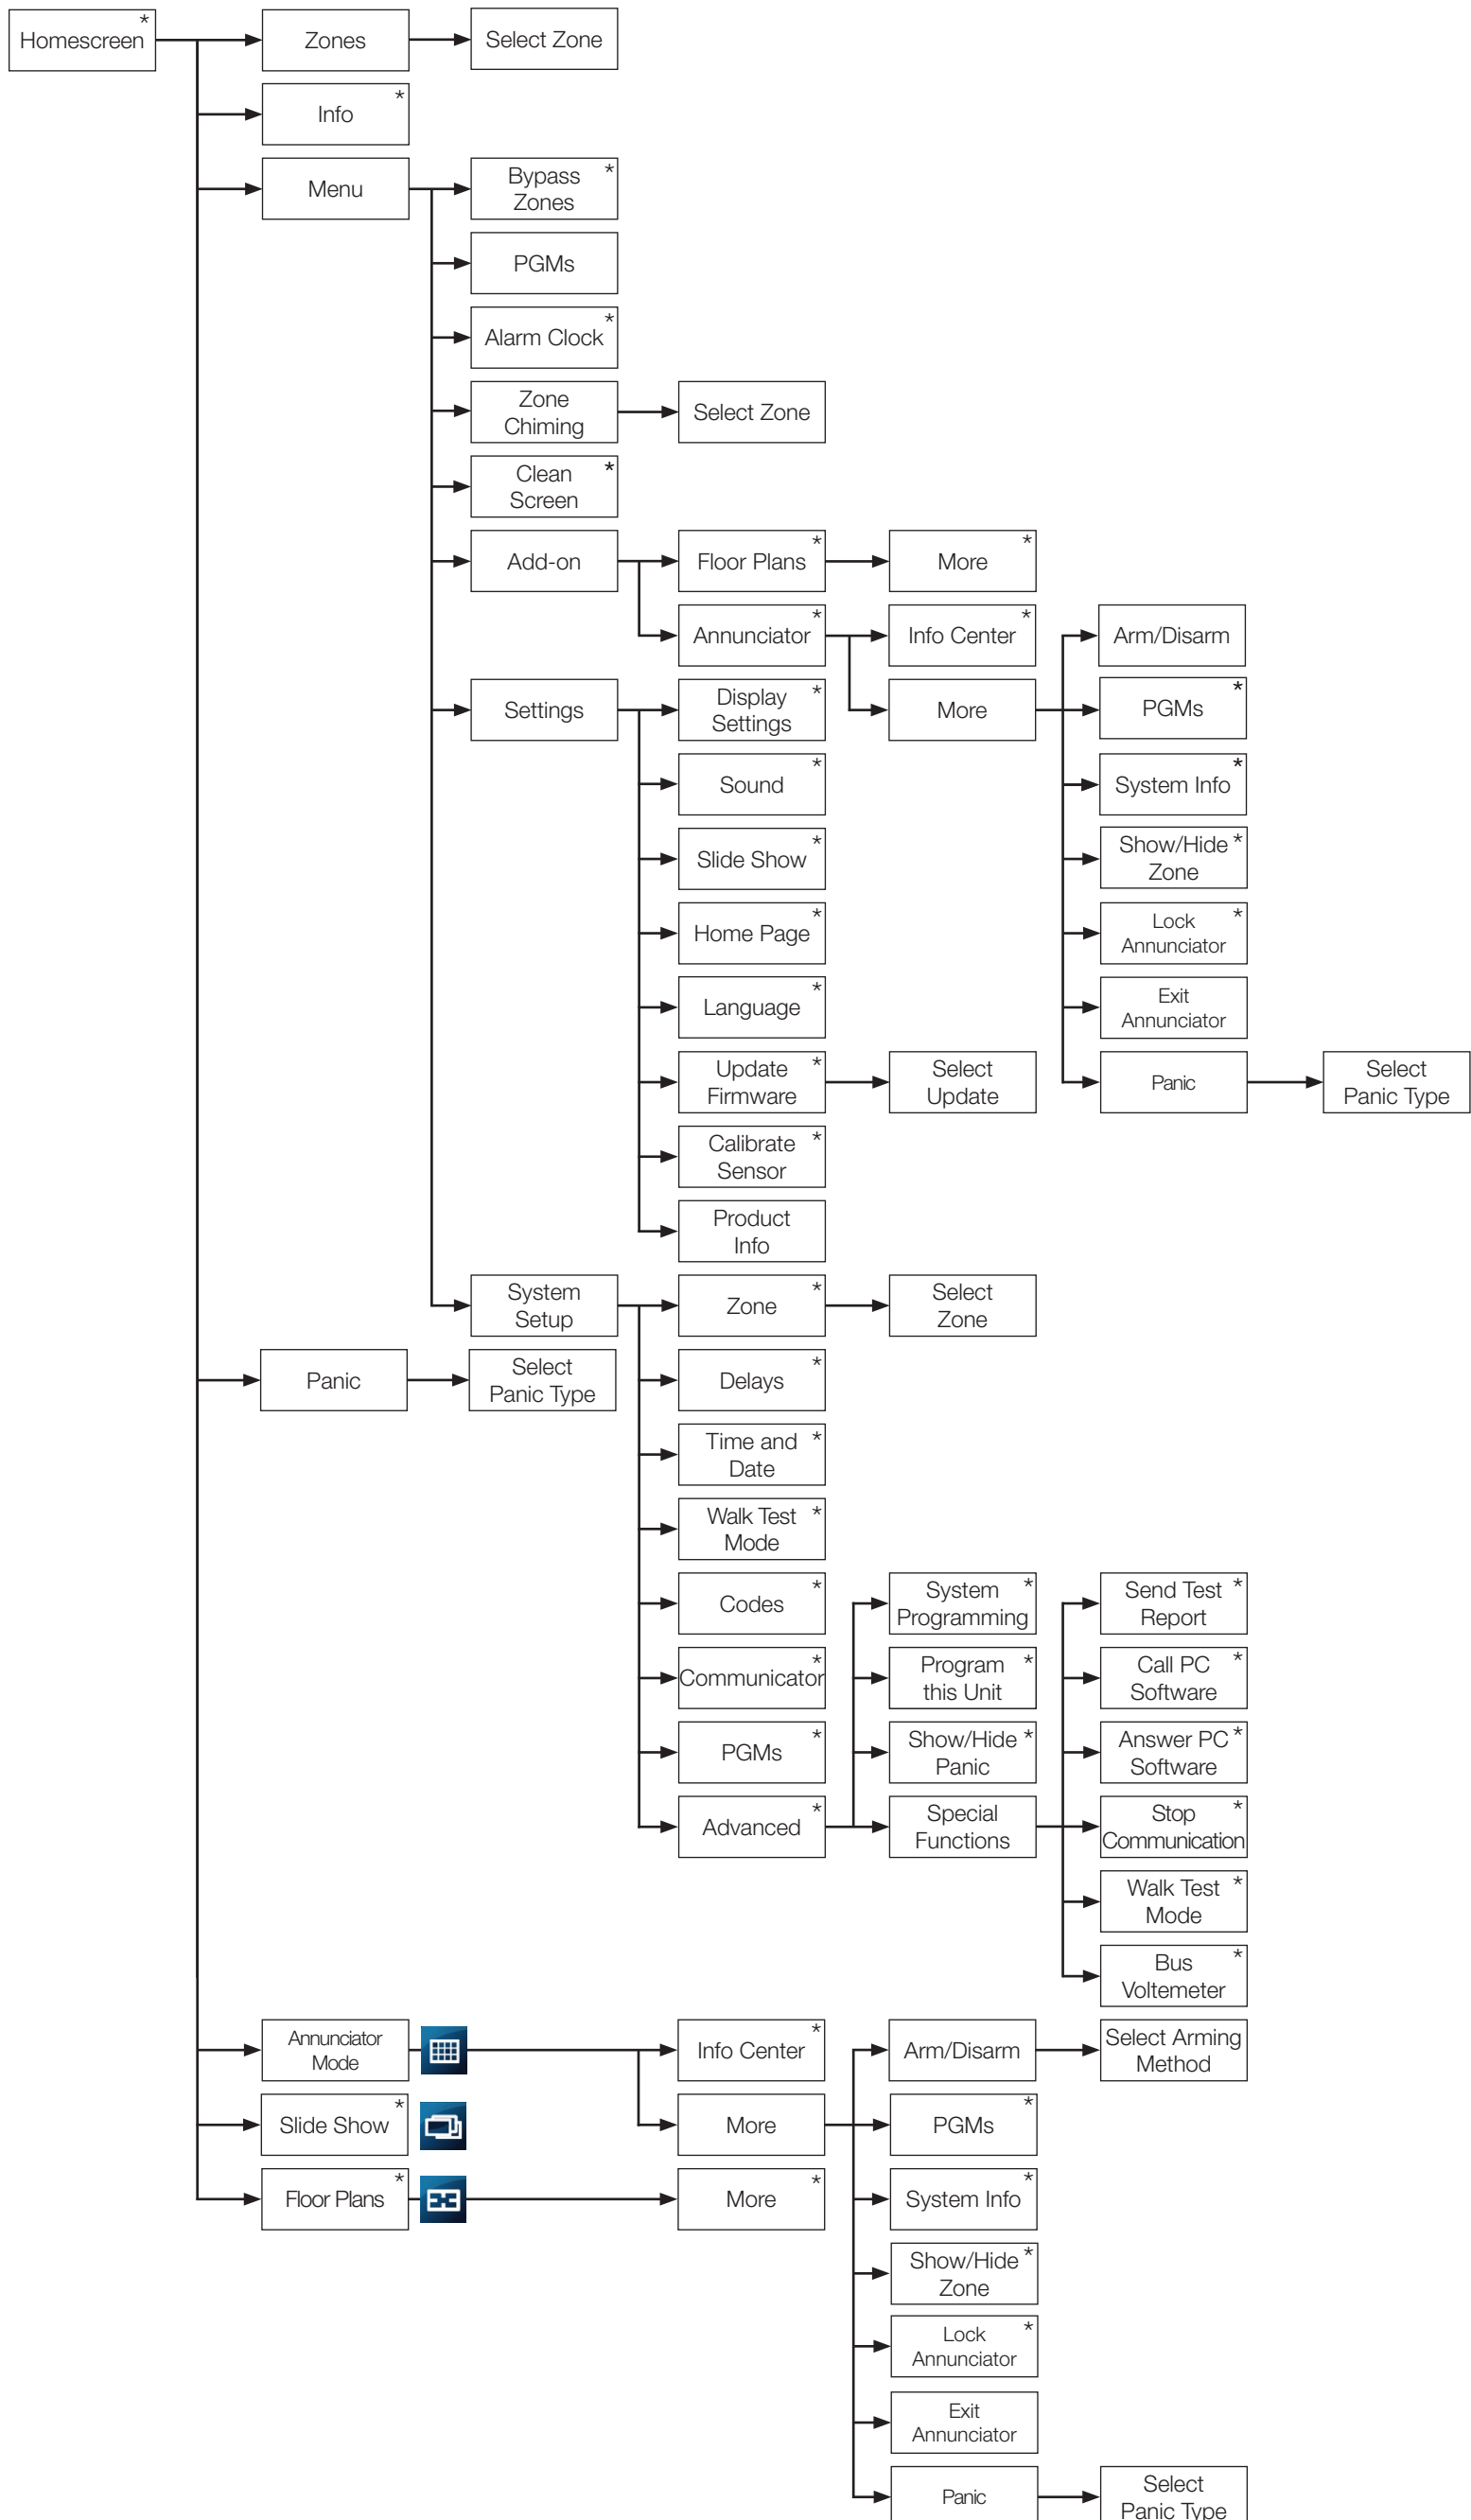**Use this document as a quick help guide to identify where certain settings/options are located within the menus.**

Flowchart of menu structure:

- Homescreen*
  - Zones → Select Zone
  - Info*
  - Menu
    - Bypass Zones*
    - PGMs
    - Alarm Clock*
    - Zone Chiming → Select Zone
    - Clean Screen*
    - Add-on
      - Floor Plans* → More*
      - Annunciator
        - Info Center* → Arm/Disarm
        - More → PGMs*
        - System Info*
        - Show/Hide Zone*
        - Lock Annunciator*
        - Exit Annunciator
        - Panic → Select Panic Type
    - Settings
      - Display Settings*
      - Sound
      - Slide Show*
      - Home Page*
      - Language*
      - Update Firmware* → Select Update
      - Calibrate Sensor*
      - Product Info
    - System Setup
      - Zone* → Select Zone
      - Delays*
      - Time and Date*
      - Walk Test Mode*
      - Codes*
        - System Programming* → Send Test Report*
        - Program this Unit* → Call PC Software*
        - Show/Hide Panic* → Answer PC Software*
        - Special Functions* → Stop Communication*
        - Walk Test Mode*
        - Bus Voltemeter*
      - Communicator*
      - PGMs*
      - Advanced*
  - Panic → Select Panic Type
  - Annunciator Mode → Info Center* → Arm/Disarm → Select Arming Method
    - More → PGMs*
    - System Info*
    - Show/Hide Zone*
    - Lock Annunciator*
    - Exit Annunciator
    - Panic → Select Panic Type
  - Slide Show*
  - Floor Plans* → More

---

* Additional options not shown

P A R A D O X ™